




RT 2100 / RT 3200

Spare Parts

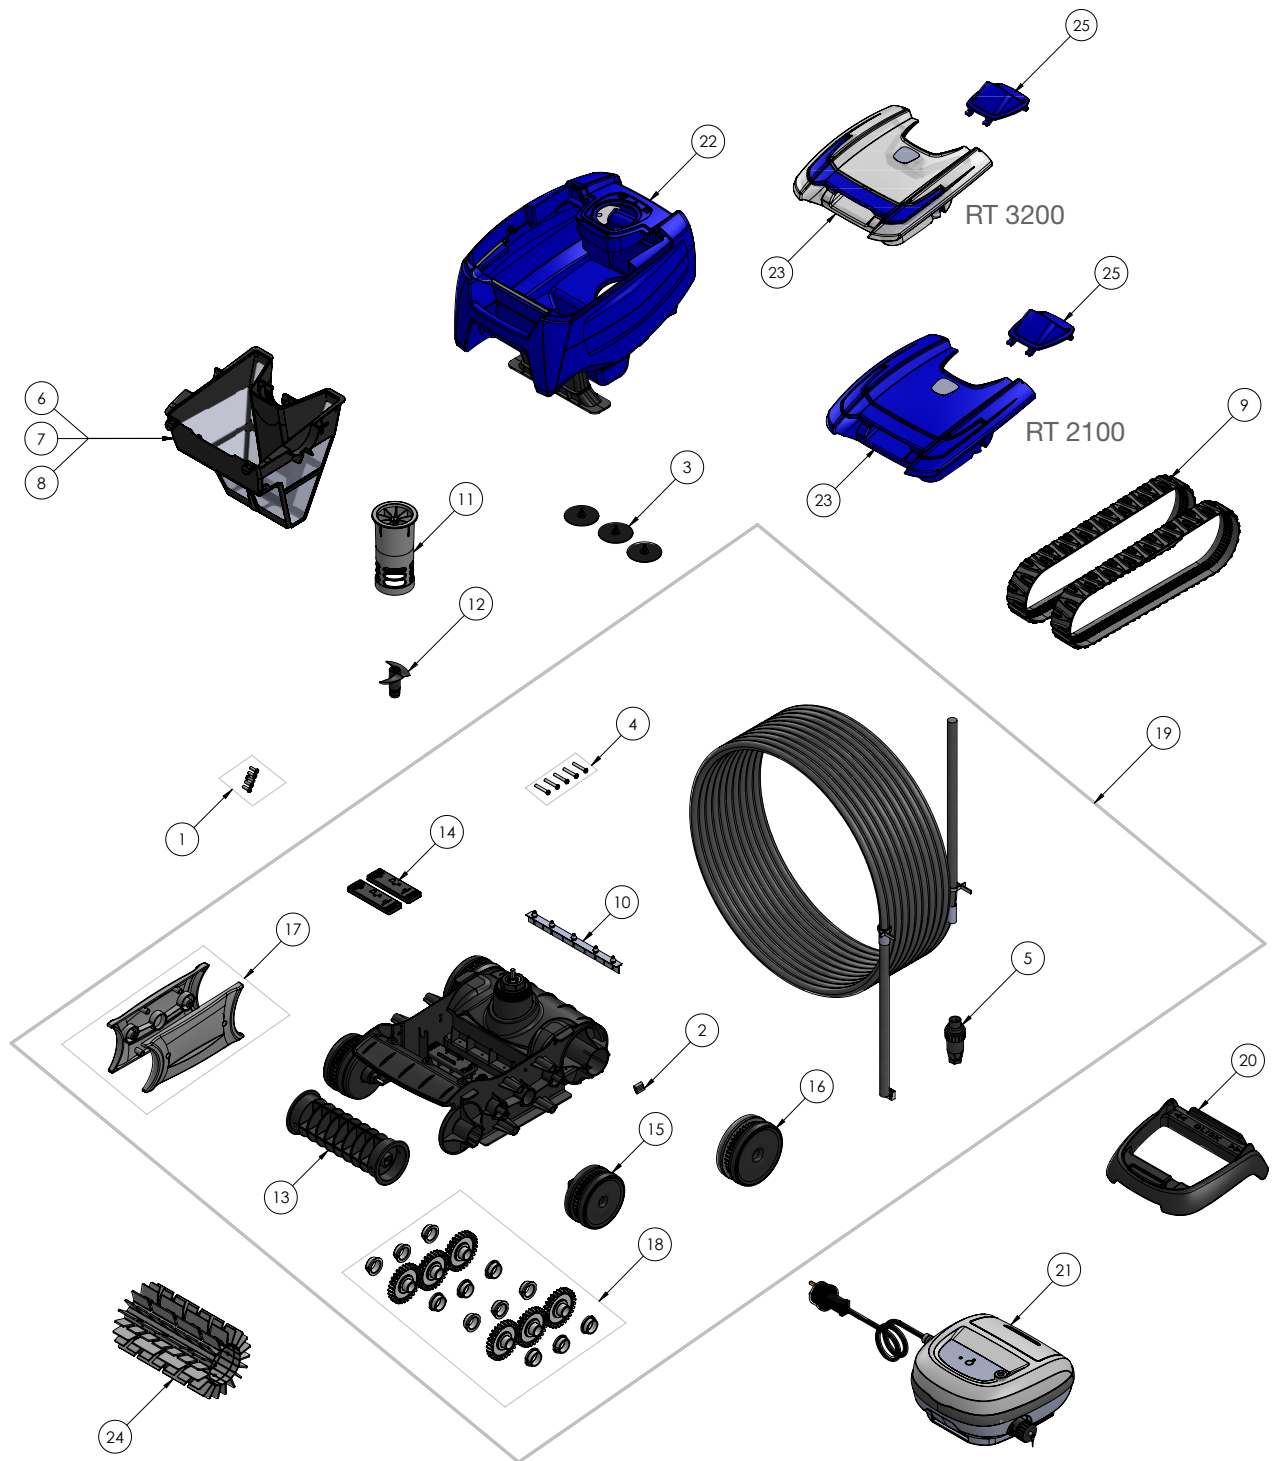

Position	Beskrivning	RT 2100	RT 3200
1	Skruv 4x12mm x5		R0516700
2	Motoraxelstift Ø4 x5		R0657900
3	Utloppsventil x 3		R0633300
4	Skruv 4x25mm x5		R0638900
5	Kontakt 4-polig		R0565600
6	Finfilter 100µ		R0762900
7	Grovfilter 200µ		R0763000
8	Extrafint filter 60µ		R0763100
9	Larvband x2		R0765600
10	Gummiblاد x5		R0765800
11	Flödesutlopp		R0766100
12	Impeller		R0766200
13	Borstrulle		R0767000
14	Ballast x2		R0767100
15	Komplett framhjul x2		R0771800
16	Komplett bakhjul x2		R0771900
17	Flänsar		R0772000
18	Komplett växelsats		R0772100
19	Komplett chassi inkl motor		R0767400
20	Styrboxhållare		R0662600
21	Styrbox	R0762200	R0762300
22	Komplett kaross		R0766300
23	Komplett lock	R0764500	R0764300
24	Linerborste		R0764900
25	Flödesutlopp externt		R0772200