




RV 5300 - RV 5380

Spare Parts

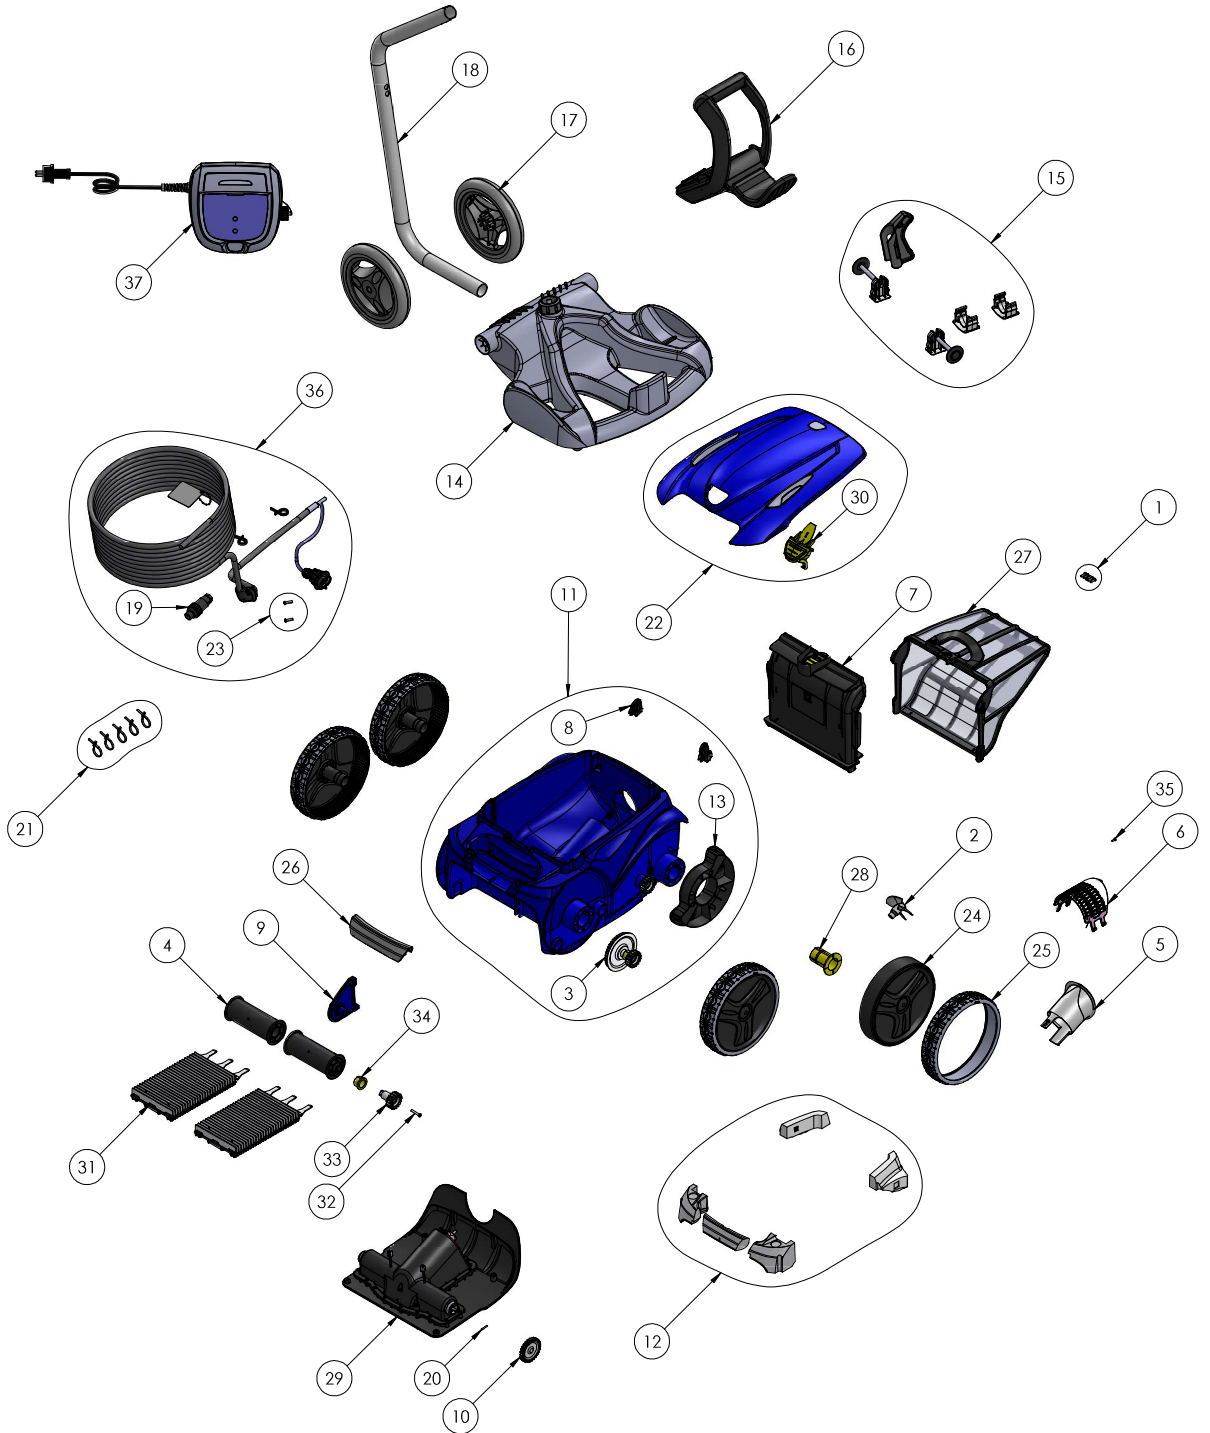

Position	Description	RV 5300	RV 5380
1	Screws 4*12 mm (x5)	R0516700	R0516700
2	Propeller	R0517000	R0517000
3	Transmission	R0517200	R0517200
4	Brush roller	R0517400	R0517400
5	Flow Outlet	R0517500	R0517500
6	Motor screen	R0517600	R0517600
7	filter canister support	R0517700	R0517700
8	Roller (Set of 2)	R0518100	R0518100
9	Roller support	R0518700	R0518700
10	Drive gear (Set of 2)	R0518800	R0518800
11	Main housing 4WD blue	R0539200	R0539200
12	Float	R0539700	R0539700
13	Cover wheels protection	R0540300	R0540300
14	Caddy base	R0564800	R0564800
15	Caddy Accessories	R0564900	R0564900
16	Caddy Handle	R0565000	R0565000
17	Caddy wheels (*2)	R0565100	R0565100
18	Caddy tube	R0565200	R0565200
19	Floating cable plug	R0565600	R0565600
20	Motor block Shaft pin (Set of 5)	R0567800	R0567800
21	Floating cable clamp (Set of 5)	R0567900	R0567900
22	Hood blue deco	R0595900	R0595900
23	Screw 4*16mm (Set of 5)	R0608500	R0608500
24	Rim Large black Zodiac	R0636000	R0636000
25	Tire Large RAL9022 Zodiac	R0636200	R0636200
26	Handle RAL9022 Zodiac	R0540403	R0540403
27	Fine filter v	R0636600	R0636600
28	Wheel bushing Zodiac	R0636700	R0636700
29	Motor block Type C	R0638000	R0638000
30	cover latch grip PMS108	R0638700	R0638700
31	Brush (Set of 2)	R0638800	R0638800
32	Screw 4*25 mm (Set of 5)	R0638900	R0638900
33	17 Gear (*2)	R0639000	R0639000
34	Outer bearing (*2)	R0639100	R0639100
35	Screw 2.9*9.5 mm (Set of 5)	R0639200	R0639200
36	Floating cable 18m	R0516800	R0516800
37	Control Unit Type 12v	R0805400	
	Control Unit 13V EU		R0868600
38	Complete Trolley	R0609100	R0609100