




# RV 5400 SW / RV 5500 SW / RV 5600

Spare Parts

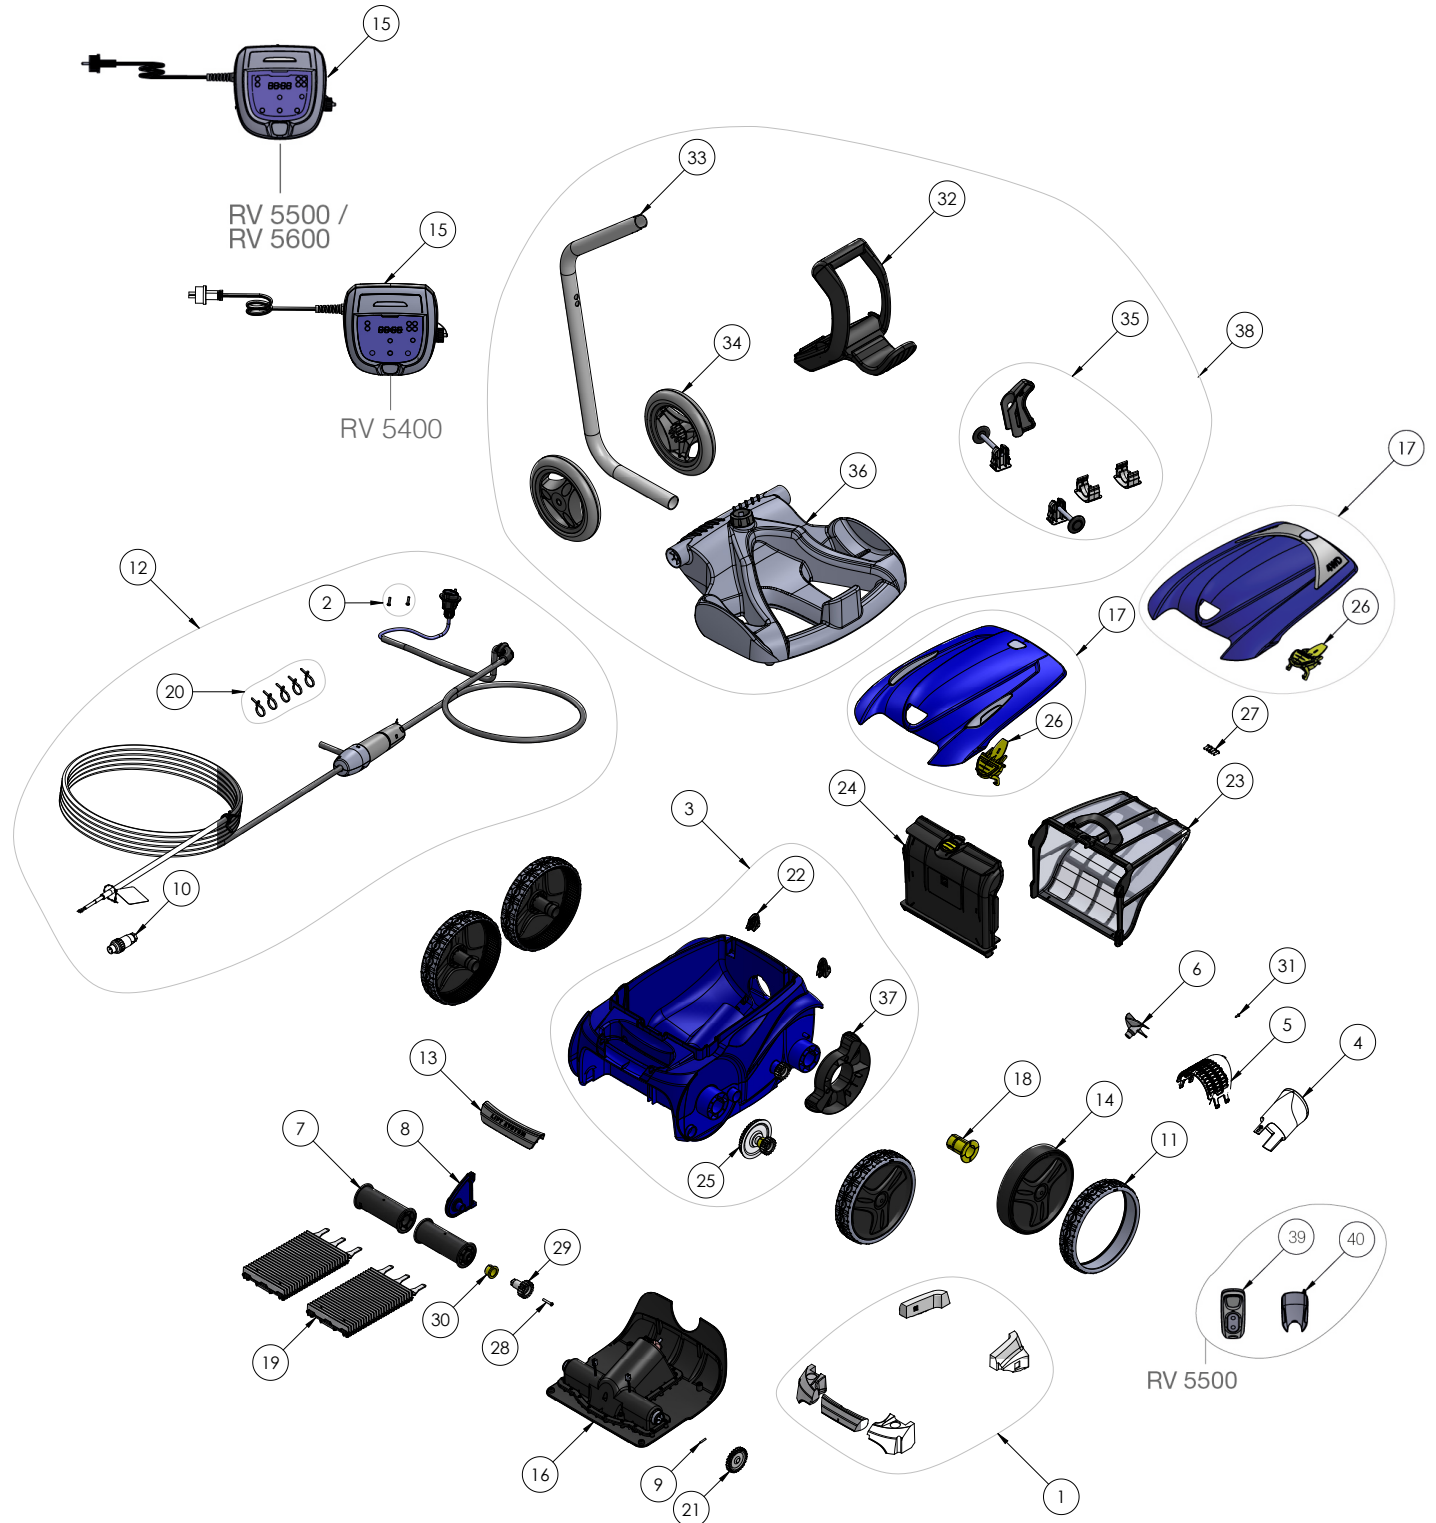

Position	Beskrivning	RV 5380 RV 5400	RV 5500	RV 5600
1	Flytdelar		R0539700	
2	Skruv 4x16mm x5		R0608500	
3	Komplett kaross		R0539200	
4	Flödesutlopp		R0517500	
5	Täckskydd impeller		R0517600	
6	Impeller		R0517000	
7	Borstrulle		W0018A	
8	Borstrullestöd		R0518700	
9	Motoraxelstift Ø4 x5		R0567800	
10	Kontakt 4-polig		R0565600	
11	Däck		R0636200	
12	Komplett flytkabel 18m m swivel	R0726600		
	Komplett flytkabel 21m m swivel		R0726700	
	Komplett flytkabel 25m			R0713200
13	Handtag		R0636501	
14	Fälg		R0636000	
15	Styrbox	R0637100	R0637200	R0713400
16	Komplett motorblock	R0638000	R0638100	
17	Komplett lock	R0595900	R0596000	
18	Hjulbussning		R0636700	
19	Borste x2		R0638800	
20	Buntband till flytkabel		R0567900	
21	Drev x2		R0518800	
22	Stödhjul x2		R0518100	
23	Finfilter 100µ		R0636600	
24	Filterhållare		R0517700	
25	Växellåda		R0517200	
26	Lockspärr		R0638700	
27	Skruv 4x12mm x5		R0516700	
28	Skruv 4x25mm x5		R0638900	
29	Hjuldrev x2		R0639000	
30	Hjullager x2		R0639100	
31	Skruv 2,9x9,5mm x5		R0639200	
32	Transportvagn handtag		R0565000	
33	Transportvagn rör		R0565200	
34	Transportvagn hjul x2		R0565100	
35	Transportvagn tillbehör		R0564900	
36	Transportvagn chassi		R0564800	
37	Skyddshjul		R0540300	
38	Komplett transportvagn		R0609100	
39	Fjärrkontrollshållare	-	R0548500	
40	Fjärrkontroll	-	R0548400	